

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

CAUTION:

If the mirror shatters during disassembly, flying debris may cause injuries. Be sure to wear protective clothing, gloves, glasses, etc. when performing these procedures.

NOTICE:


When replacing the mirror body, prevent damage to the mirror body by placing a protective cloth on the work area.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH

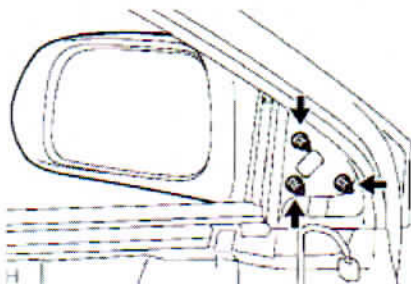


3. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH

- (a) Disconnect the connector.
- (b) Remove the 3 nuts and mirror.

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

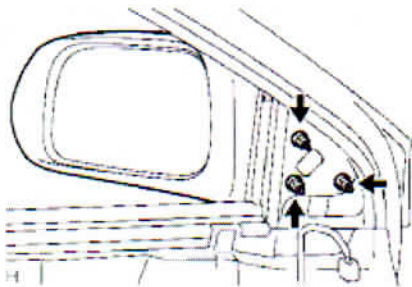

1. INSTALL OUTER REAR VIEW MIRROR ASSEMBLY LH

(a) Install the mirror with the 3 nuts.

Torque: 8.0 N·m (82 kgf·cm, 71in·lbf)

(b) Connect the connector.

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL